


Take out the top few clips. (to about half way down the cover)



Fold the cover back.

You will need to take off the cover from around the licence plate lamps in order to free them.

Remove 4 nuts. One either side that you can see here, and two in the middle that are holding the lock. These can't be seen in the picture as they are masked by the black metal.

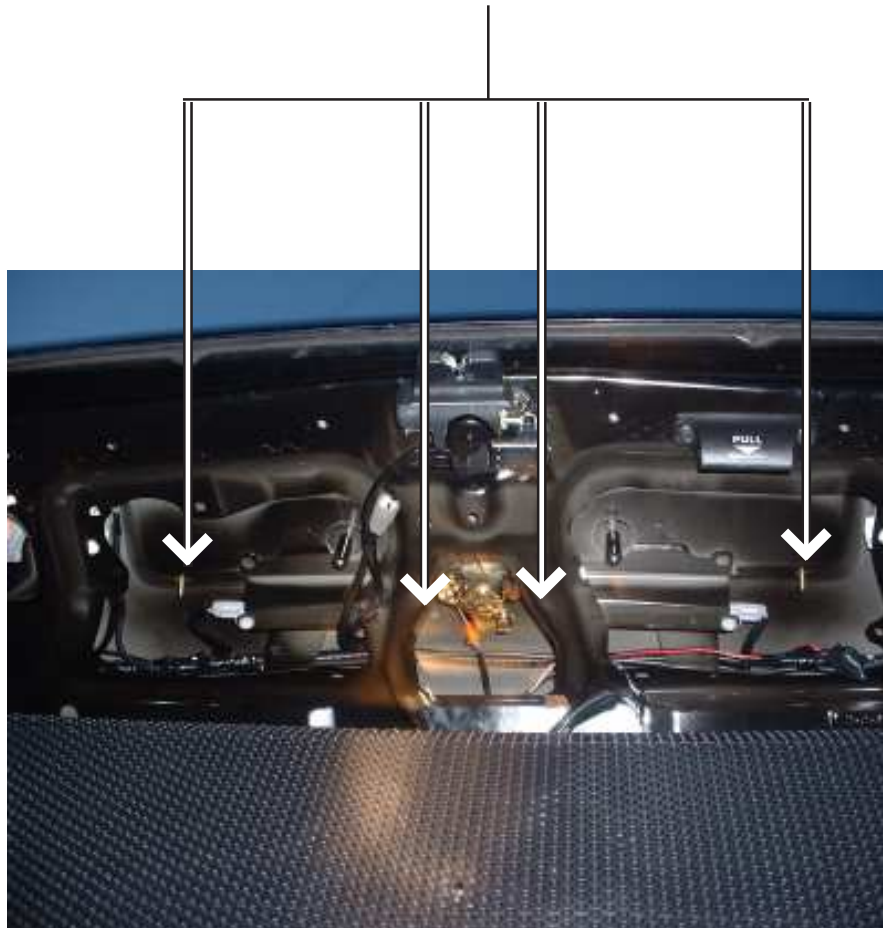

Remove the bolts and the cover bar pulls off. There are retaining clips in between the bolts so you will feel some resistance. It does just pull out easy enough though.

The lamp holders slide in towards the centre of the car and pull out.

You can then remove the bulb with a simple twist as with any other bayonet type bulb holder.

